




Cast with Confidence

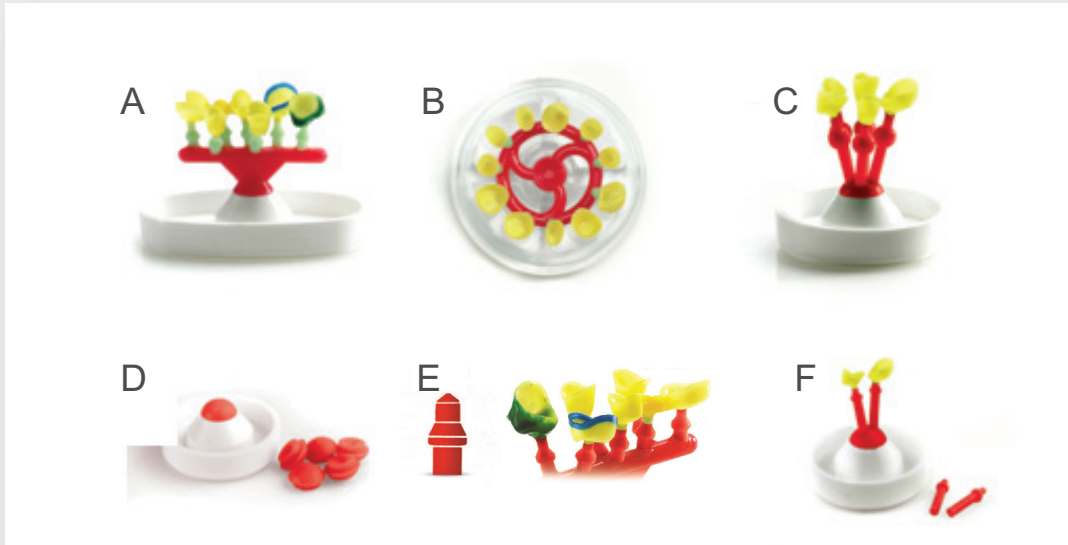

Super Spru™

Wax Sprue System

A. Indirect Runner Bars

- Solid center promotes unrestricted metal flow from the button to the runner bar.
- High strength, extra rigid wax formula burns out clean and residue free at low temperatures.
- Has no memory, preventing patterns and bridges from bending.
- Produces dense, accurate castings.

B. Circular Spru™

- Produces a large number of precision castings at one shot.
- Special flow dynamic design carries molten alloy forcefully to the patterns with less turbulence.
- Ensures consistent placement of patterns in the proper heat zone, technically improving quality.
- Increase productivity.
- Produces superior quality castings.

C. Direct Reservoir Sprues

- Reservoir provides a constant supply of molten alloy to the pattern during solidification.
- Prevents “suck-backs.”
- Tapered, pointed tip creates “nozzle-effect.”
- Produces dense, porous free castings.

D. Wax Buttons

- **Used to facilitate sprue attachment.**
- **Bullet shape carries molten alloy forcefully to patterns.**

E. Feeder Sprues

- Feeder Short used to join bridges and wax patterns to distribution bar.
- Feeder Long can be used for direct or indirect castings.

All Avtek products are satisfaction guaranteed and are also available through your dental dealer.